

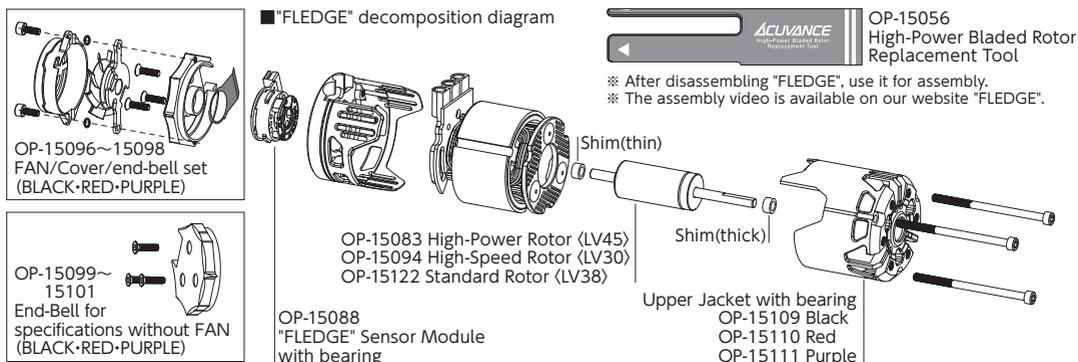
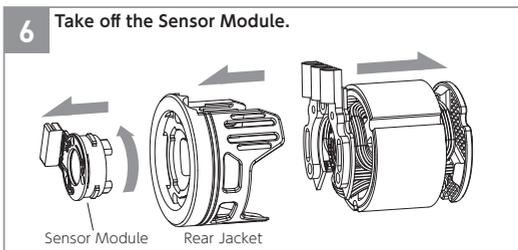
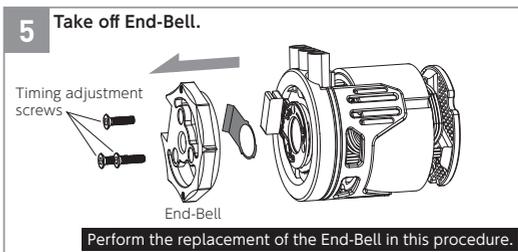
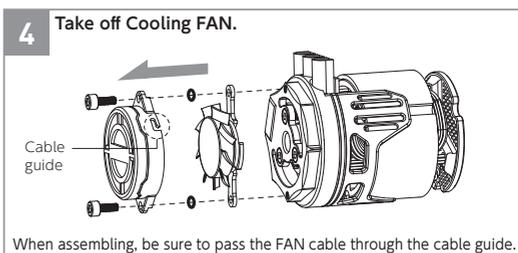
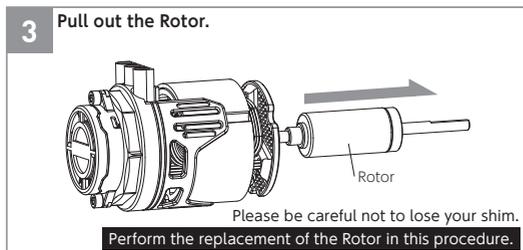


Thank you very much for purchasing optional parts for FLEDGE. It's necessary to decompose FLEDGE in the case of the use with this product. Please work on replacing after reading this manual carefully.

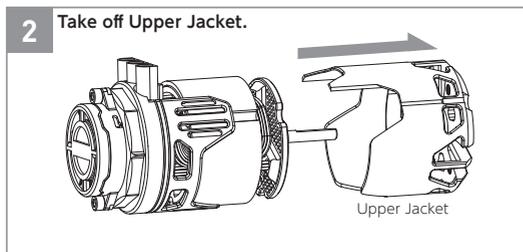

"FLEDGE" disassembly procedure

Perform the assembly in the reverse order.

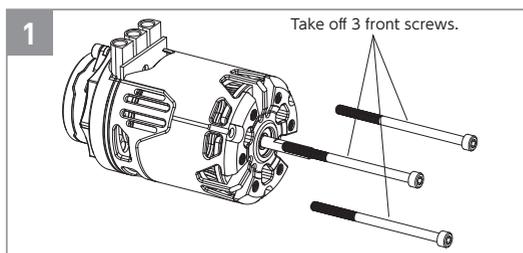

Customer Support

ACUVANCE CORPORATION Technical Service Dept.

7F, Shin-Osaka Marubiru Annex 1-18-22 Higashinakajima Higashiyodogawa-ku
Osaka 533-0033 Japan.

E-mail support@acuvance.co.jp Web www.acuvance.co.jp

Turn the Sensor Module and pull it out so that the protrusion on the outer circumference matches the recess on the inner circumference of the rear jacket.

Perform the replacement of the Sensor Module in this procedure.